

Chromatic Objective Optimization for Extended Depth of Focus (*EDOF*)

M. Gostiaux Gabriel, M. Yohan Penaranda

*M. Gabriel Gostiaux, Master of Science student, Institute of Optics,
Palaiseau, 91 120, France*

gabriel.gostiaux@institutoptique.fr

*M. Yohan Penaranda, Master of Science student, Institute of Optics,
Palaiseau, 91 120, France*

yohan.penaranda@institutoptique.fr

Abstract: This study introduces optimization through optical design softwares such as Zemax Optic Studio to basic concepts of co-design. The optimization can be monitored with matlab via the Zemax OS API, in order to optimize parameters of a chromatic imaging system dedicated to EDOF. In the end, the image will be post-processed using high-frequency transfer algorithm to enhance RGB image resolution.

Keywords: EDOF, high frequency transfer, chromatic imaging system, Zemax OS API, Matlab.

References and links

1. P. TROUVE, "Co-conception pour la mesure 3D," IOGS, 11–25 (2024).
2. C.L. Tisse, H.P. Nguyen, R. Tessières, M. Pyanet, and F. Guichard. "Extended depth-of-field (EDoF) using sharpness transport across colour channels," In Society of Photo-Optical Instrumentation Engineers (SPIE) Conference Series, **volume 7061**, page 4 (2008).

1. Introduction

One of the many objectives of co-design is to simulate optical designs in order to optimize costs through reducing the number of elements of the optical chain of a system. It is also possible to replace costly elements with hybrid ones, integrating signal and image processing in the system.

Here, we will focus on system modelling and optimization. In the first section we will see how using an optical design software helps with the modelling of such a chromatic system. We will see how optimizing the curvature radius and the focus, can be monitored by the criteria of maximizing the range within which at least one of the channels is resolved. Again, this is actually equivalent to maximizing the union of the depth of focus of the three RGB channels of a chromatic camera within a range of interest. This generalized depth of focus (GDOF, 1) will be computed in matlab through the Zemax OS API. In the second section we will dive into the optimization of the chromatic system in the purpose of using it with the HFR algorithm. Thus, we will optimize it so that each channel have the best Modulation Transfer Function (MTF).

$$GDOF = L \cap (\cup_{i \in R, V, B} DoF_i) \quad (1)$$

2. Co-Design of a Chromatic Imaging System with Zemax OS

2.1. Design simulation

We work with the file `add-on-zemax.zmx` which provides a simple design, composed of an add-on and a paraxial lens. The add-on is composed of two different type of glass, separated by a spherical surface of radius R . It is this surface that will be optimized later on. The layout is presented on Fig. 1, and the chromatic aberration can already be seen to the experimented eye.


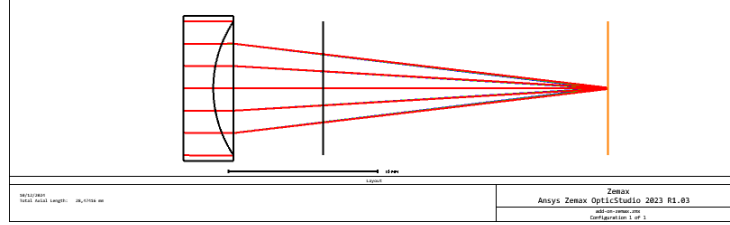


Fig. 1: System layout

We presented the analysis made with the tools provided by Zemax, the through focus spot diagram (TFSD) on Fig. a and the longitudinal aberration on Fig. b. The TFSD is interesting because one can see the different focusing planes and the remaining RMS spot size of the other channels in those planes. On the longitudinal aberration, one can observe the focal shift of each channel when varying the field (y axis is the pupil coordinate).

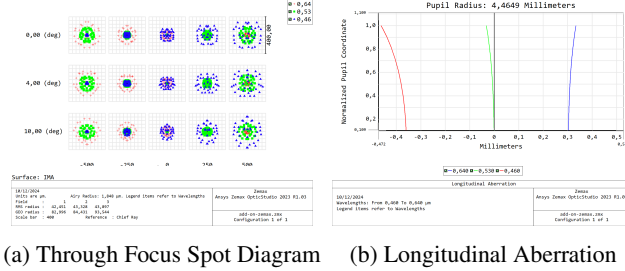

(a) Through Focus Spot Diagram (b) Longitudinal Aberration

Fig. 2: Chromatic aberration of the initial system

Thanks to those analysis, we can have a first estimate of the chromatic aberration : the longitudinal aberration is 0,68 mm and this is confirmed by the longitudinal aberration diagram computed with Zemax, as can be seen on Fig. b.

The sensor position considered in this study is $x'_0 = 2\text{ m}$. The Spot Diagram figures allow the extraction of RMS values for different colors. At this position, the RMS radii for red, green, and blue are respectively $RMS_R = 35,987\text{ }\mu\text{m}$, $RMS_G = 2,951\text{ }\mu\text{m}$, and $RMS_B = 37,183\text{ }\mu\text{m}$. Indeed, the system optimizes the focal plane to match the focal plane of the green channel, as it is the most sensitive for the human eye.

2.2. GDOF computation driven through Matlab with ZOS API

The function `get_RMS_SpotSize.m` was used to directly interface with an instance of Zemax from Matlab to extract the RMS Spot Size.

This function was modified to retrieve this value for the three channels R, G, and B, for the system with a focus that minimizes the RMS spot size (Quick Focus). The results were obtained for a curvature radius corresponding to the one used in the Zemax file.

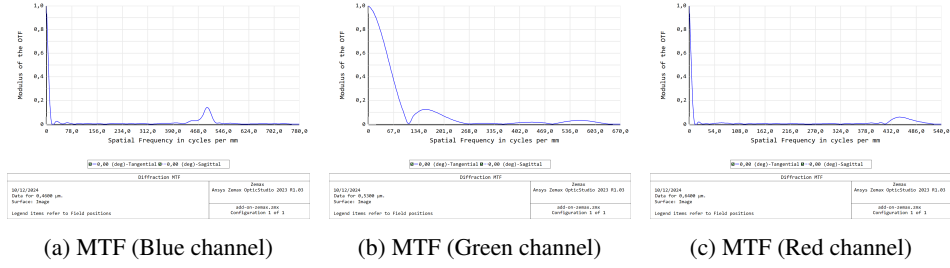


Fig. 3: MTF of different channels

```
Surf_0.Thickness = 2000;
QuickFocus = TheSystem.Tools.OpenQuickFocus();
QuickFocus.RunAndWaitForCompletion();
QuickFocus.Close();

% ...

r0 = [r0, spot_results.SpotData.GetRMSSpotSizeFor(1,1)];
```

here, we first define the object too camera distance, then perform a quick focus and retrieve the RMS radii for the red, green, and blue channels. They were found to be $RMS_R = 35,987 \mu\text{m}$, $RMS_G = 2,951 \mu\text{m}$, and $RMS_B = 37,183 \mu\text{m}$, respectively. This confirms that the system optimizes the focal plane to match the focal plane of the green channel, as it is the most sensitive for the human eye. The sensor position considered in this study is $x'_0 = 28,9 \text{ mm}$. The Spot Diagram fig.4 allows the extraction of RMS values for different colors. At this position, the RMS radii for red, green, and blue are respectively $RMS_R = 48,942 \mu\text{m}$, $RMS_G = 3,999 \mu\text{m}$, and $RMS_B = 50,889 \mu\text{m}$. This values can be compared after applying a quick focus by the software at the same position for the object : $RMS_{R_{bf}} = 42,330 \mu\text{m}$, $RMS_{G_{bf}} = 3,050 \mu\text{m}$, and $RMS_{B_{bf}} = 57,688 \mu\text{m}$, displayed fig.5. The best focus affects slightly the green channel, enhances the red channel and degrades the blue one.

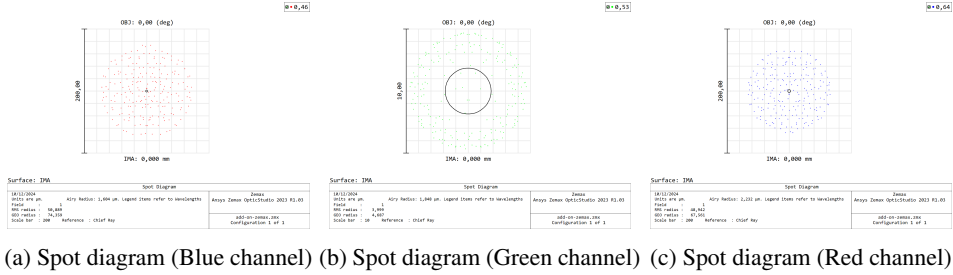



Fig. 4: Spot diagram of different channels

2.3. Performance criteria

3. Optimization for HFR post-processing

List of Figures

1	System layout	2
---	-------------------------	---

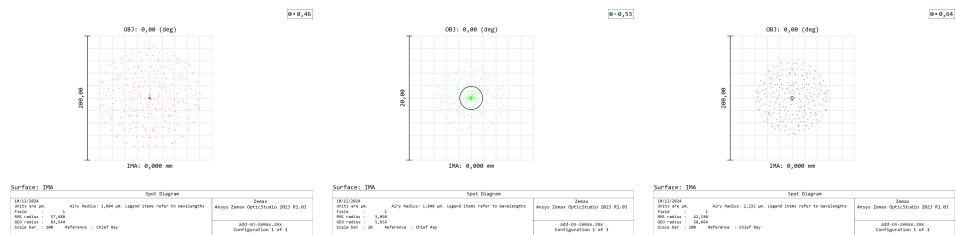

(a) Spot diagram (Blue channel) (b) Spot diagram (Green channel) (c) Spot diagram (Red channel)

Fig. 5: Spot diagram of different channels with best focus

2	Chromatic aberration of the initial system	2
3	MTF of different channels	3
4	Spot diagram of different channels	3
5	Spot diagram of different channels with best focus	4